



USER MANUAL FLOOR HEATING STRIP

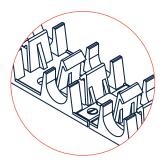





Glue and screw the strip to the floor as needed.

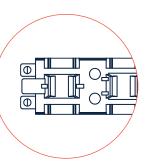

Join the strips in succession using the special grooves while maintaining a minimum spacing of 48 inches between the strips.



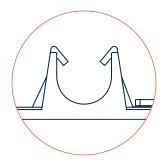

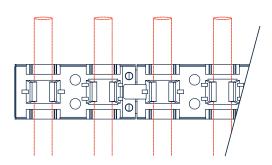

Insert the ½" or 5/8" pipes into the floor heating strip according to your looping plan.

TECHNICAL SPECIFICATIONS

Model#	Lenght		Width		Height		Weight	
	in	mm	in	mm	in	mm	lb	kg
FHS12	39.37	1000	1.77	45	1	24	0.55	0.25