



USER MANUAL FLOOR HEATING STRIP

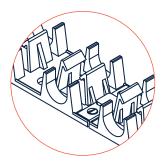




Glue and screw the strip to the floor as needed.




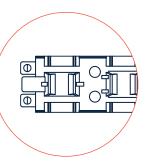

Join the strips in succession using the special grooves while maintaining a spacing between 2 and 4 feet.



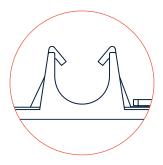

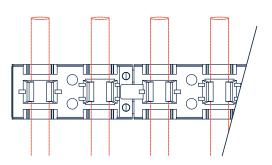

Insert the ½" or 5%" pipes into the floor heating strip according to your looping plan.

TECHNICAL SPECIFICATIONS

Model#	Lenght		Width		Height		Weight	
	in	mm	in	mm	in	mm	lb	kg
FHS12	39.37	1000	1.77	45	1	24	0.55	0.25